

# DATSUN PICK-UP

## SERVICE MANUAL

MODEL  
620 SERIES



**NISSAN MOTOR CO., LTD.**  
TOKYO, JAPAN

### QUICK REFERENCE INDEX

GENERAL INFORMATION .....	GI
ENGINE TUNE-UP .....	ET
ENGINE MECHANICAL .....	EM
ENGINE LUBRICATION SYSTEM .....	EI
COOLING SYSTEM .....	CO
FUEL SYSTEM .....	EF
ENGINE ELECTRICAL SYSTEM .....	EE
ENGINE REMOVAL & INSTALLATION .....	ER
CLUTCH .....	CL
TRANSMISSION .....	TM
AUTOMATIC TRANSMISSION .....	AT
PROPELLER SHAFT & DIFFERENTIAL CARRIER .....	PT
FRONT AXLE & FRONT SUSPENSION .....	FE
REAR AXLE & REAR SUSPENSION .....	RA
BRAKE .....	BR
WHEEL AND TIRE .....	WT
STEERING .....	ST
ENGINE CONTROL FUEL & EXHAUST SYSTEM .....	FE
BODY .....	BF
BODY ELECTRICAL .....	BE
SERVICE EQUIPMENT .....	SE

# FOREWORD

This service manual has been prepared for the purpose of assisting service personnel of authorized NISSAN/DATSUN dealers in providing effective service and maintenance of the 1973 DATSUN PICK-UP.

Since proper maintenance and service are absolutely essential in satisfying the owners of Datsun, this manual should be carefully studied and kept in a handy place for ready reference.

This manual includes procedures for maintenance adjustments, minor service operations, removal and installation, and for disassembly and assembly of components.

The Quick Reference Index on the first page enable the reader to quickly locate the desired section. At the beginning of each individual section is a table of contents which gives the page number on which each major subject begins. A index is placed at the beginning of each major subject within the section.

Special Tools required for servicing are presented in the "SE" section.

All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication approval.

Rights for alteration of specifications and methods at any time are reserved.

**NISSAN MOTOR CO., LTD.**  
TOKYO, JAPAN